




COMFORTMAX
Forward Seat Bar Socket
I:I

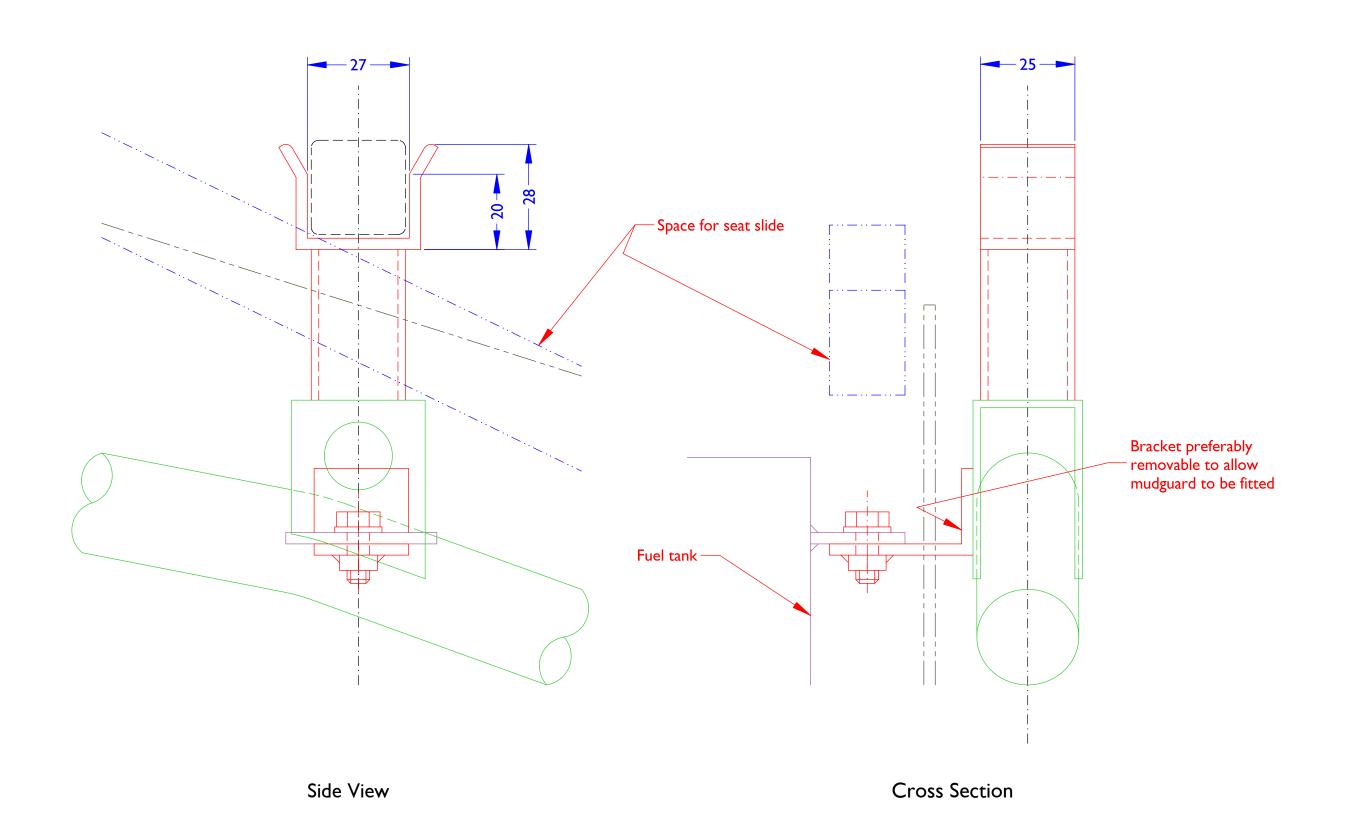

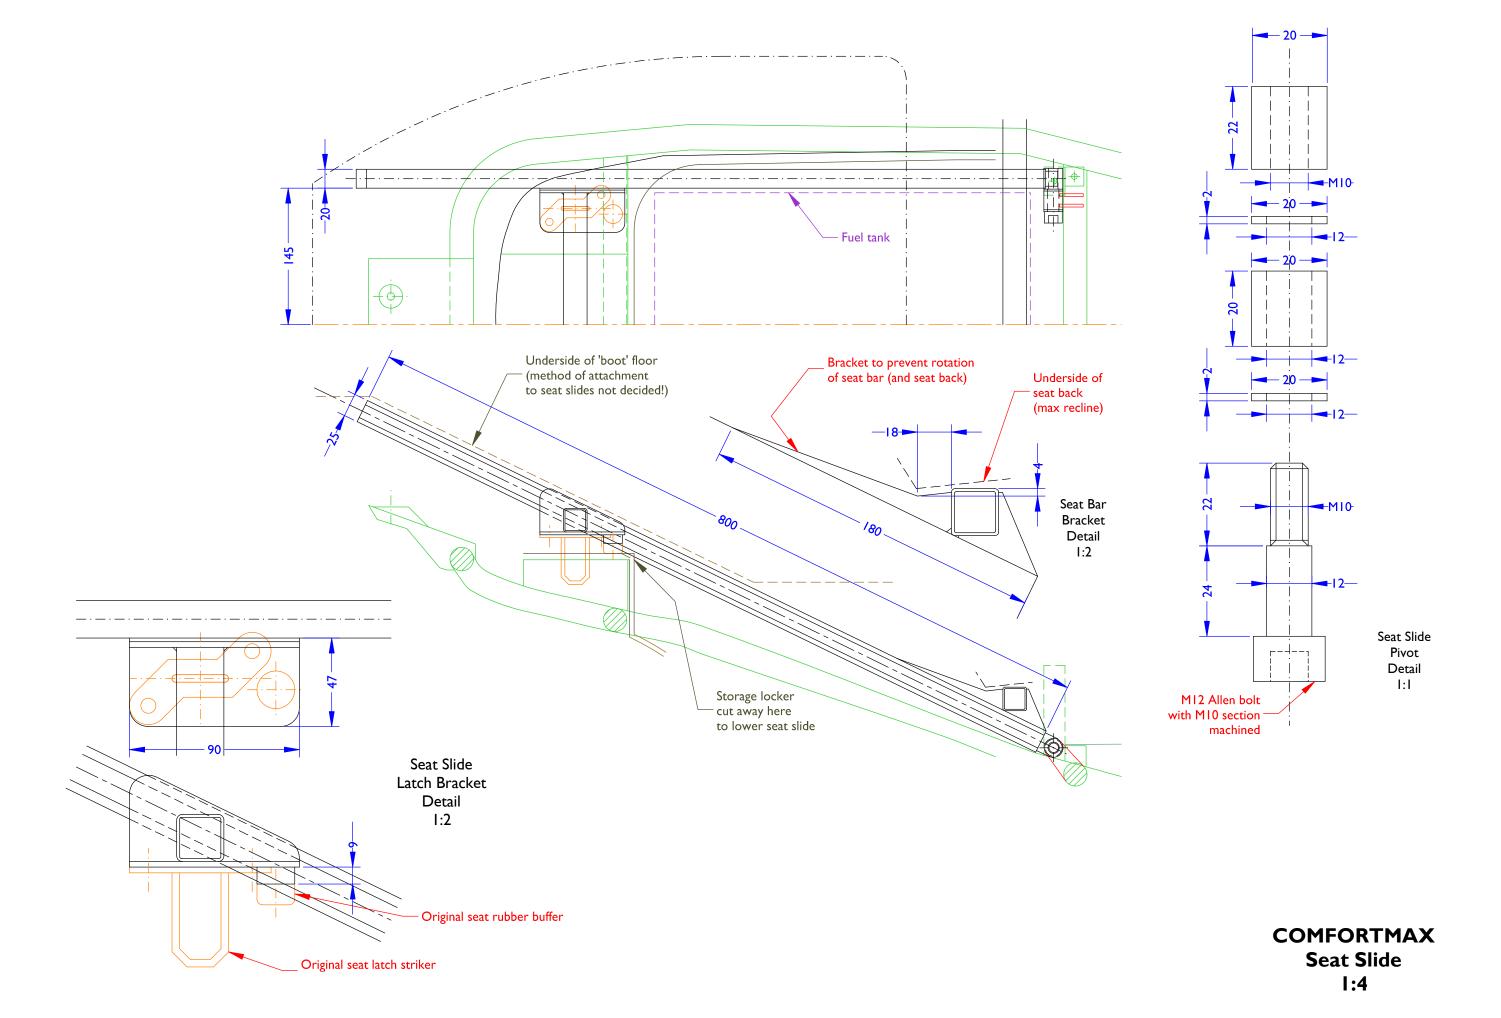

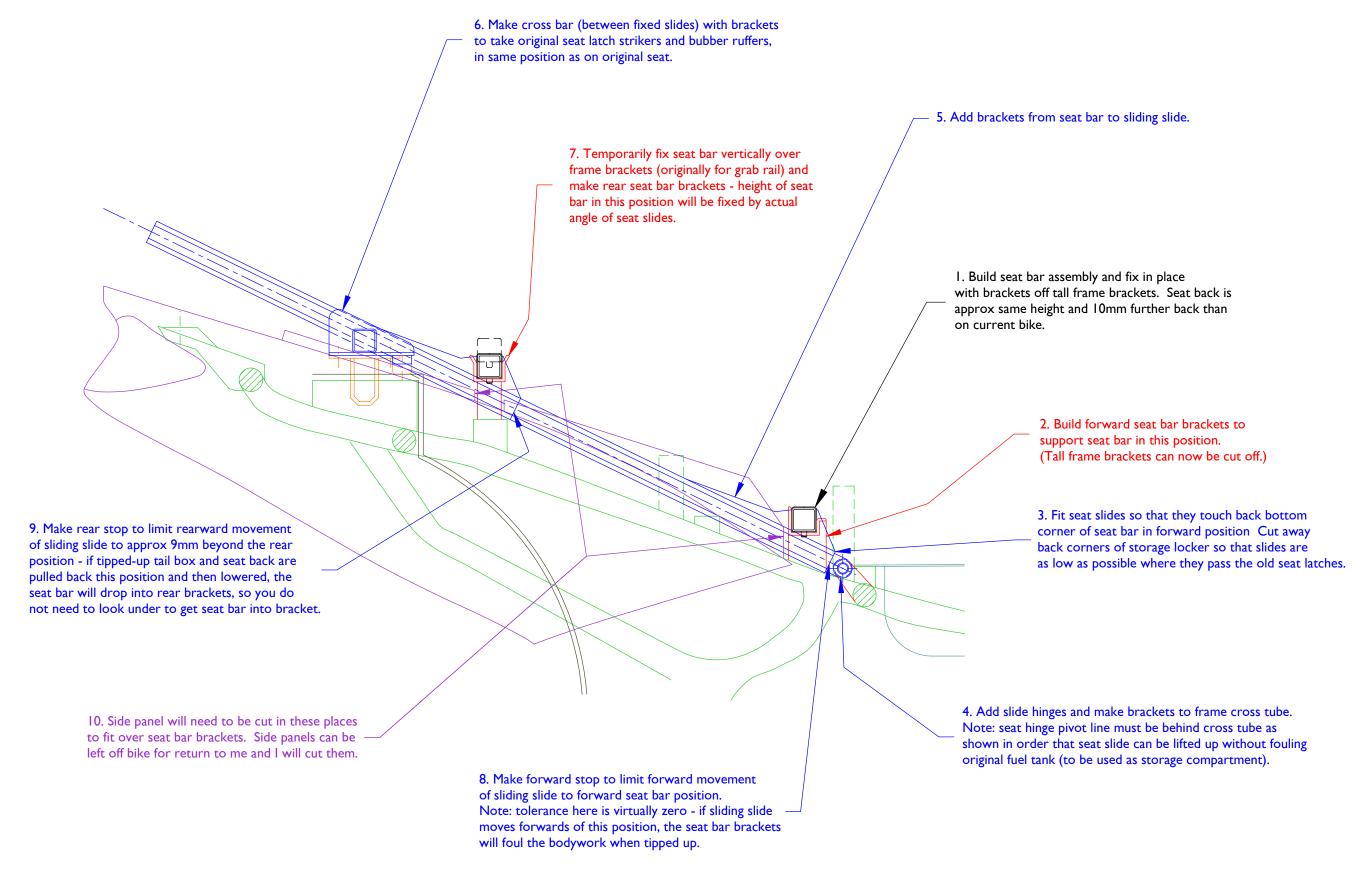

COMFORTMAX
Seat Slide Assembly Sequence